


AK-47 SELF BOND TEMPLATE

Created by AGE ARMS

For best results, cut out template using a ruler and an exacto blade or razor.

For accurate folding, use your blade to make a very light scribe on the fold lines.

Bonding the template can be done with a glue stick. The glue and template can be easily removed with cold running water.

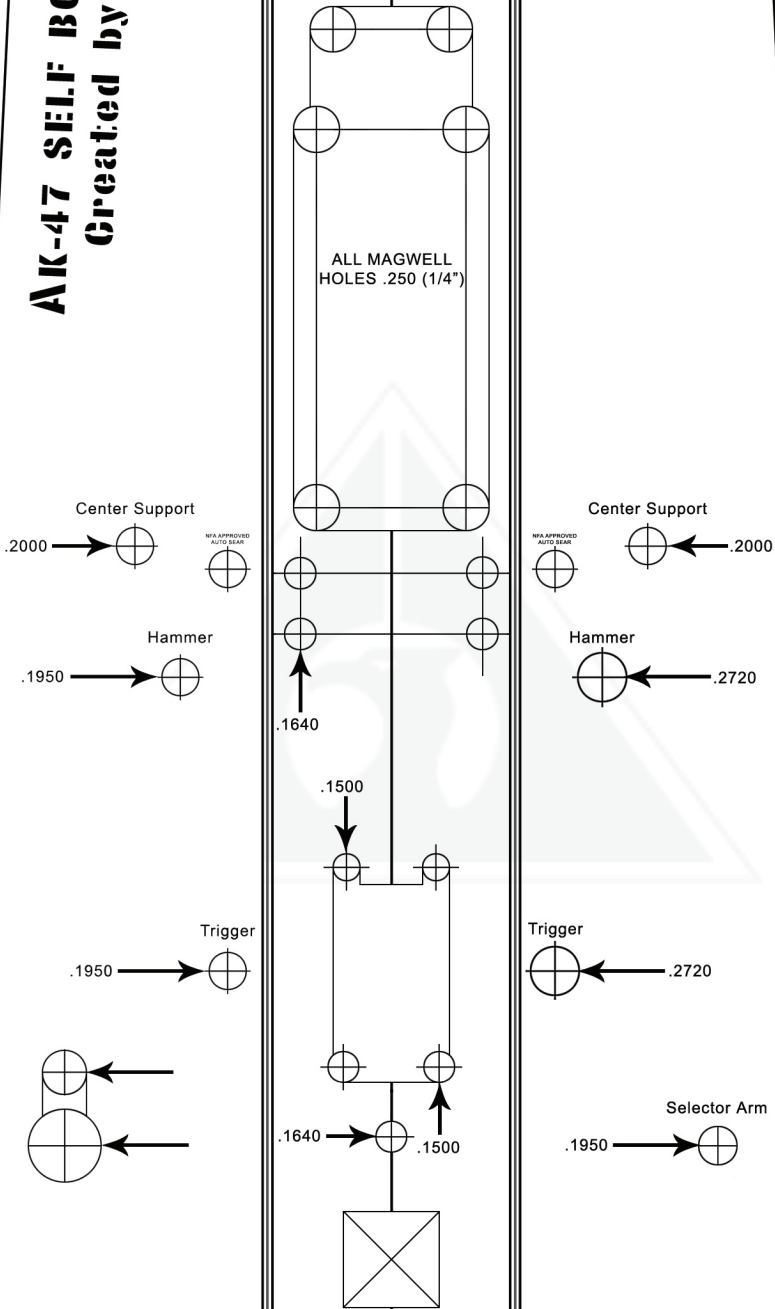

Trunion holes vary between kits. Drill your trunion holes by measuring off of your own front and rear trunions.

Top rail cutout notches may also vary slightly. Measure and cut according to your kit.